

Important: Hand shower installation

- A. Install the hand shower hose (7) to the hand shower (5) by screwing the conical nut to the end. (Image #1). Be cautious of the direction of the hose, as the conical nut with the inscription “FLOW” on it must be installed to the outlet supply. (Image #2)
- B. Be sure the gaskets (6) are in place in both conical nuts before screwing them.

Important: Installation de la douchette

- A. Installer le boyau de la douchette (7) à la douchette (5) en vissant la noix conique jusqu'au bout. (Image #1) Faire attention au sens du boyau, la noix (8) avec l'inscription “FLOW” doit être vissée sur la sortie d'eau. (Image #2)
- B. Veillez vous assurer que les joints d'étanchéité (6) soient bien en place dans la noix conique (7) et dans la noix avec deux valves anti-retour (8) avant de les visser.

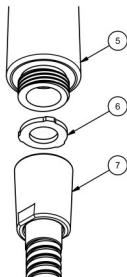


Image #1

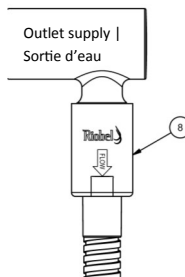


Image #2

